

Here's how easy it is to create flawless paint!



1 Wash

Remove loose contaminants using a traditional hose and bucket, foaming system, rinseless, or waterless method.



2 Clay

Prep the surface and produce a truly clean slate by removing stubborn, embedded contaminants from your paint.



3 Butter

Spread product onto pad face starting at center and work to outer edge. Spread evenly with domed cap.



4 Polish

Place the buffing pad onto paint, set machine speed to 2, then spread product in a 2'x 2' area. Turn speed up to 3-5 for polishing.



5 Wipe

After polishing wipe residue away with a premium microfiber towel, turning the towel often, then buff to a brilliant luster.

Have fun in your garage!®



GRIOT'S

GARAGE

See perfection in every reflection

You've made a great choice putting this tool in your hand.

Let me tell you with complete assurance... you're about to have the most fun you've ever had in your garage. Removing swirl marks and other surface defects from paintwork always brings a smile to my face. The balance and comfort of this tool, mixed with the amazing results it creates will have you grinning from ear to ear in that mirror-like finish. Of course, we are here if you need us. Training videos are on YouTube, griotsgarage.com, or if you just need to talk to a pro, give us a call at 800-345-5789. Now stop reading and go have some fun!

Richard

Richard Griot
Car Care Perfectionist




100% **GUARANTEED**



ADVANCED PAINT CARE OPTIONS

Polishing Tips

- First do no harm. Always use the least invasive method first. Test method in 1' x 1' area and adjust approach if necessary.
- Dedicate your pads. Don't apply wax to a pad you've polished with.
- Butter entire pad face prior to application using domed cap. Reapply using 3 or 4 opposing drops on each subsequent panel.
- Set appropriate machine speed per reference chart.
- Place cord over your shoulder to avoid contact with paint surface.
- Always start and stop machine with pad resting on the surface.
- Keeping pad flat to the surface, work in 2' x 2' sections. Let each panel be your guide.

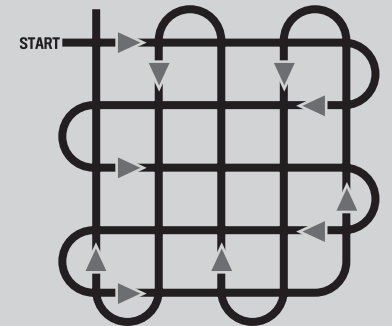

- Apply using overlapping, light-pressure passes with steady arm speed.
- Frequently clean pad by running it against a Foam Pad Conditioning Brush or towel.
- **Compound & Polishing**
Work one section at a time, then remove residue immediately by hand using a microfiber towel.
- **Waxing & Sealing**
Apply a thin, even layer to entire vehicle. Allow residue to dry to a haze or wait 20-30 minutes then wipe clean with a premium microfiber towel.
- **Pad Maintenance**
Following work, rinse pads thoroughly with hot water, treat with Microfiber & Foam Pad Cleaner, allow to dwell, rinse thoroughly, and air dry.



BOSS BEST OF SHOW SYSTEM

See more advanced car care products at griotsgarage.com

METHOD	PAINT CONDITION	USE THESE PRODUCTS	APPLICATION
Decontaminate Surface Remove loose and bonded contaminants prior to polishing. 1 - Wash and dry 2 - Assess the surface 3 - Clay if rough	Embedded Contaminants OVERSPRAY FALLOUT BRAKE DUST TREE SAP MIST WATER SPOTS ROAD DEBRIS 	 USE WITH Brilliant Finish Synthetic Clay with Speed Shine as a lubricant	Brilliant Finish™ Synthetic Clay used with Speed Shine® <ul style="list-style-type: none"> • Following a wash, mist a liberal application of Speed Shine onto the paint to serve as a lubricant. • Then gently glide a Brilliant Finish Synthetic Clay Pad across surface until smooth. Pro Tip: Break-in Synthetic Clay by treating glass first. Always work on a cool surface.
ASSESS SURFACE CONDITION: SELECT ONE OF THE FOLLOWING OPTIONS BASED ON: 1. PAINT CONDITION 2. TIME ALLOWED 3. DESIRED RESULTS			
1-STEP Pure Protection <input type="checkbox"/> Correct <input type="checkbox"/> Perfect <input checked="" type="checkbox"/> Protect	Wax Ready Paint WAX READY PAINT 	 OR Liquid Gloss Poly Wax with Red Foam Waxing Pad Best of Show Wax with Red Foam Waxing Pad	Liquid Gloss Poly Wax Speed Setting: 2-3 <i>For high gloss and maximum protection.</i> <ul style="list-style-type: none"> • Using moderate arm speed, apply a thin, even coat to entire vehicle, then remove residue when dry using a premium microfiber towel. Best of Show Wax® Speed Setting: 2-3 <i>For maximum color, depth, and clarity.</i> <ul style="list-style-type: none"> • Apply a thin even application to entire vehicle. Allow residue to dry to a haze or wait 20-30 minutes then wipe clean with a premium microfiber towel.
1-STEP All-In-One <input checked="" type="checkbox"/> Correct <input checked="" type="checkbox"/> Perfect <input checked="" type="checkbox"/> Protect	Fine Swirls, Scratches, and Stains SWIRLS SCUFFS STAINS 	IN ONE STEP Liquid Wax 3-in-1 with Orange Foam Correcting Pad	Liquid Wax 3-in-1 Speed Setting: 2-3 <ul style="list-style-type: none"> • Using slow arm speed, apply a thin, even coat to entire vehicle. Allow residue to dry to a haze or wait 20-30 minutes then wipe clean with a premium microfiber towel.
2-STEP Correct & Protect <input checked="" type="checkbox"/> Correct <input checked="" type="checkbox"/> Perfect <input checked="" type="checkbox"/> Protect	Light Swirls, Scratches, and Stains SWIRLS SCRATCHES WATER SPOTS 	STEP 1 Complete Compound with Microfiber Fast Finishing Pad STEP 2 Liquid Wax 3-in-1 with Orange Foam Correcting Pad	Complete Compound™ Speed Setting: 3-4 <ul style="list-style-type: none"> • Using slow arm speed, work one section at a time, then immediately remove residue using a premium microfiber towel. Liquid Wax 3-in-1 Speed Setting: 2-3 <ul style="list-style-type: none"> • Using moderate arm speed, apply a thin, even coat to entire vehicle. Allow residue to dry to a haze or wait 20-30 minutes then wipe clean with a premium microfiber towel.
3-STEP Best of Show® Method <input checked="" type="checkbox"/> Correct <input checked="" type="checkbox"/> Perfect <input checked="" type="checkbox"/> Protect	Moderate Swirls and Scratches SCRATCHES OXIDATION 	STEP 1 Complete Compound with Microfiber Fast Finishing Pad STEP 2 Complete Polish with Orange Foam Correcting Pad STEP 3 Best of Show Wax or Liquid Gloss Poly Wax with Red Foam Waxing Pad	Complete Compound™ Speed Setting: 4-5 <ul style="list-style-type: none"> • Using slow arm speed, work one section at a time, then immediately remove with a microfiber towel. Complete Polish Speed Setting: 3-4 <ul style="list-style-type: none"> • Work one section at a time, then immediately remove with a microfiber towel. Best of Show Wax® or Poly Wax Speed Setting: 2-3 <ul style="list-style-type: none"> • Using moderate arm speed, apply a thin, even coat to entire vehicle. Allow residue to dry to a haze or wait 20-30 minutes then wipe clean with a premium microfiber towel.

